




BOTANICARE®

Slide Bench

TRILOCK™


TRELLISING SUPPORTS

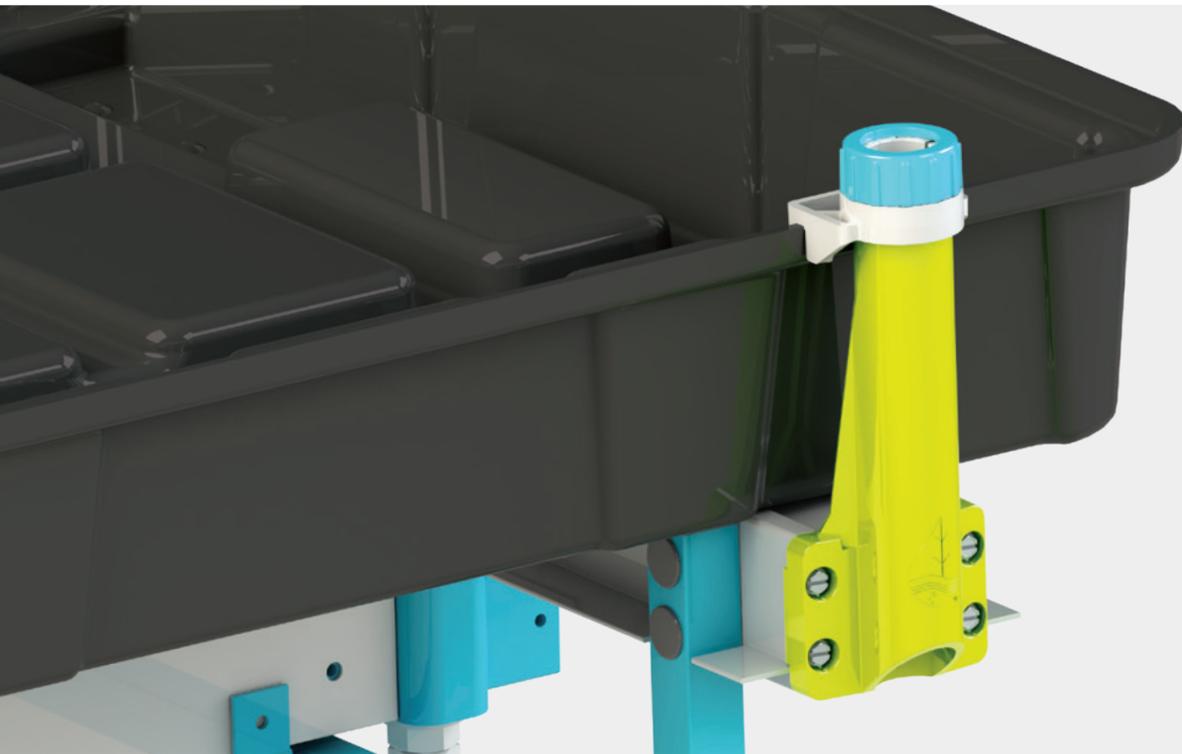

ASSEMBLY INSTRUCTIONS


REFERENCE PN: HGC706168

Step A. Install Trellising Support

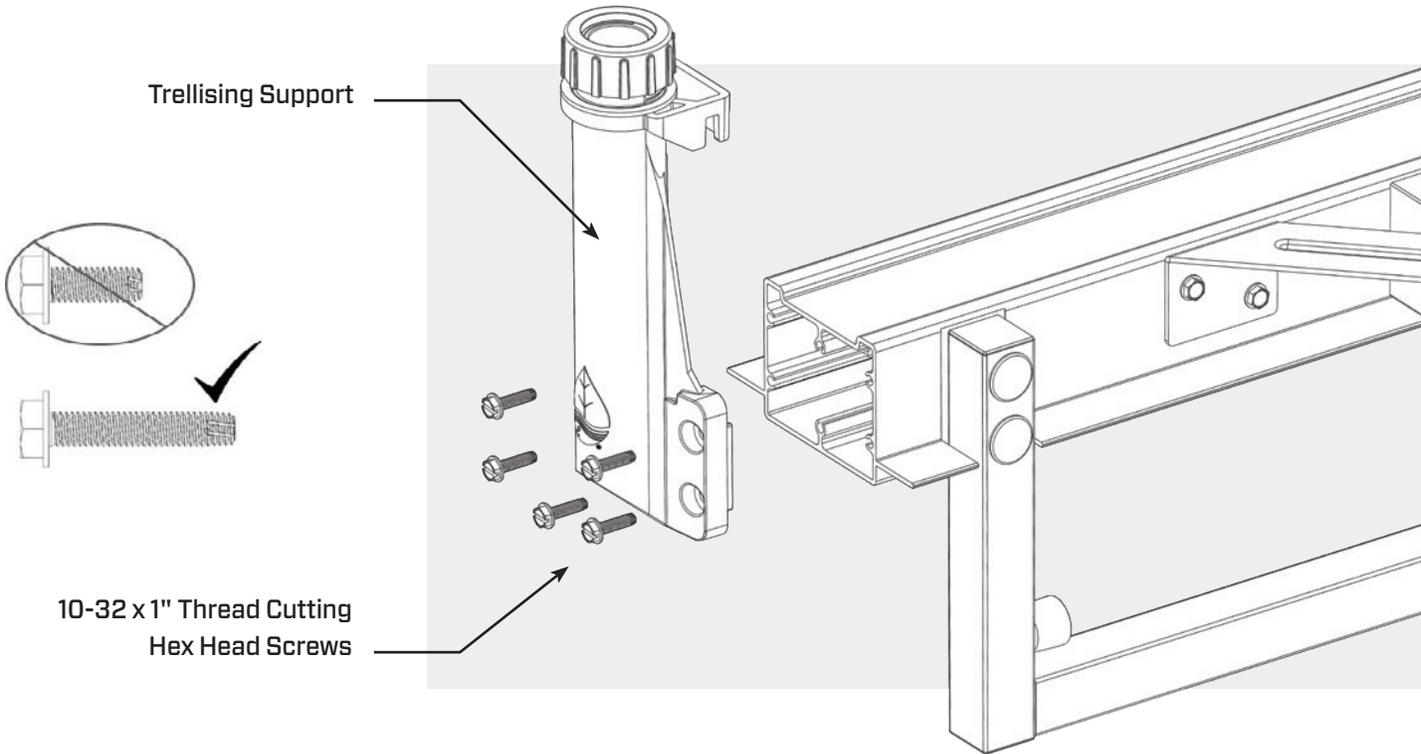

Step B. Install Trays

Follow step 11 from the Botanicare® Slide Bench assembly procedure. The full installation manual can be found at: <https://www.botanicare.com/growmod/#resources>

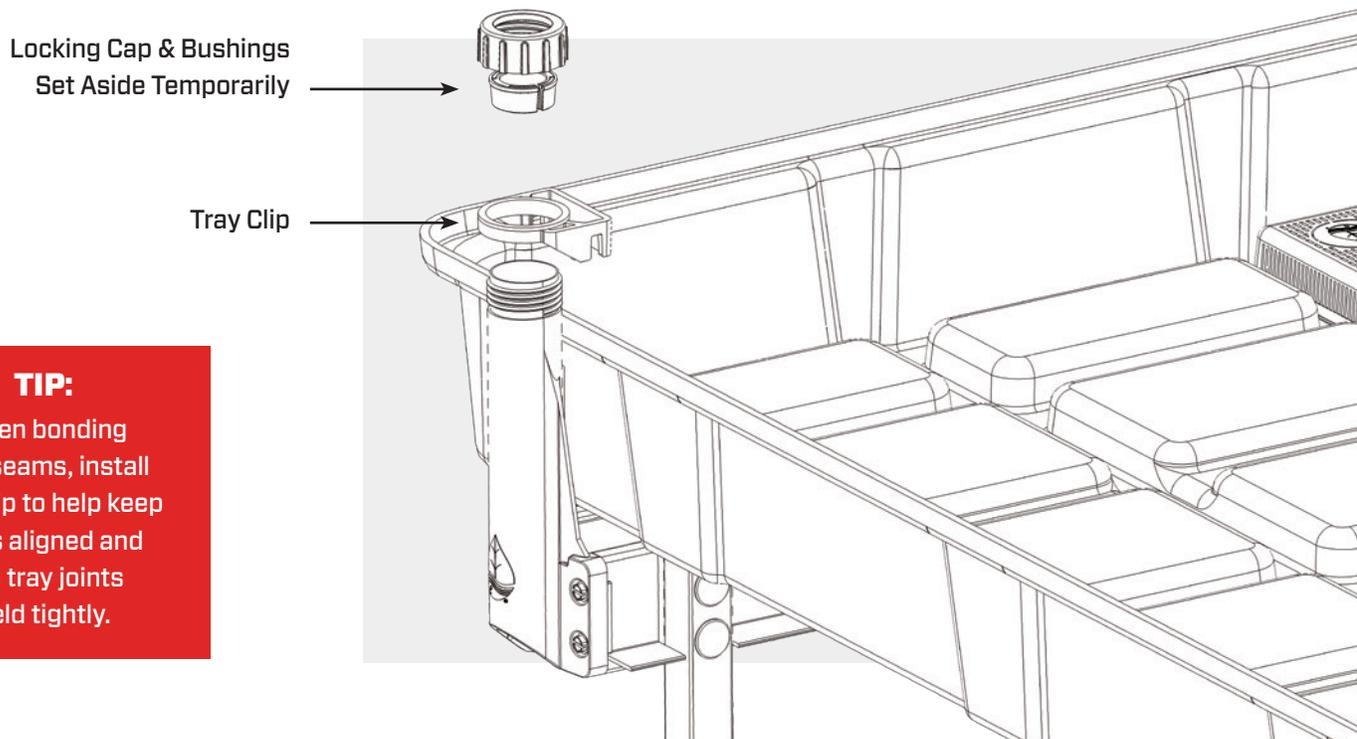

TIP:


When bonding tray seams, install tray clip to help keep trays aligned and the tray joints held tightly.

Step C. Install Trellising Uprights

The Trilock™ Trellising Supports are designed to accommodate these uprights:

CAUTION:

Tighten the locking cap by hand only.

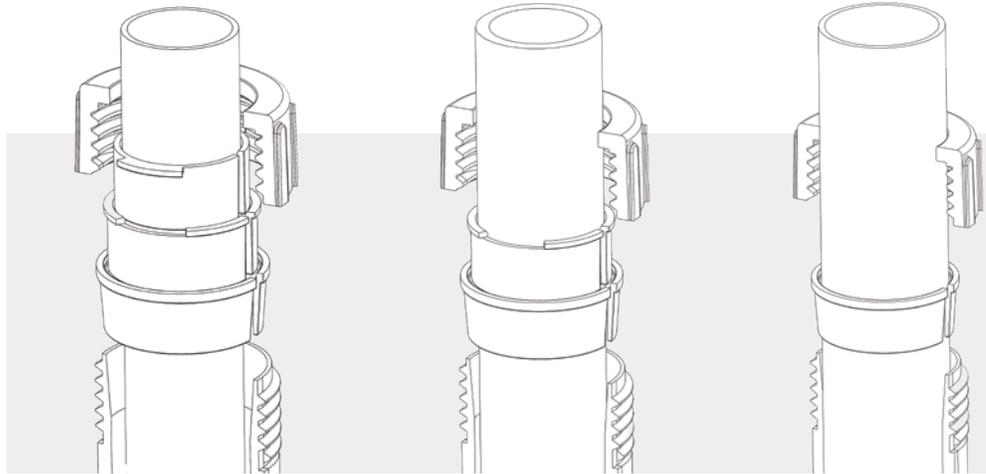


3/4" EMT
(0.922" OD)
Requires all
three bushings

3/4" PVC
(1.050" OD)
Requires outer &
middle bushings

1" EMT
(1.163" OD)
Requires only the
outer bushings

Ensure the trellising upright sits on the correct shelf in the upright support.

1" EMT
3/4" PVC
3/4" EMT

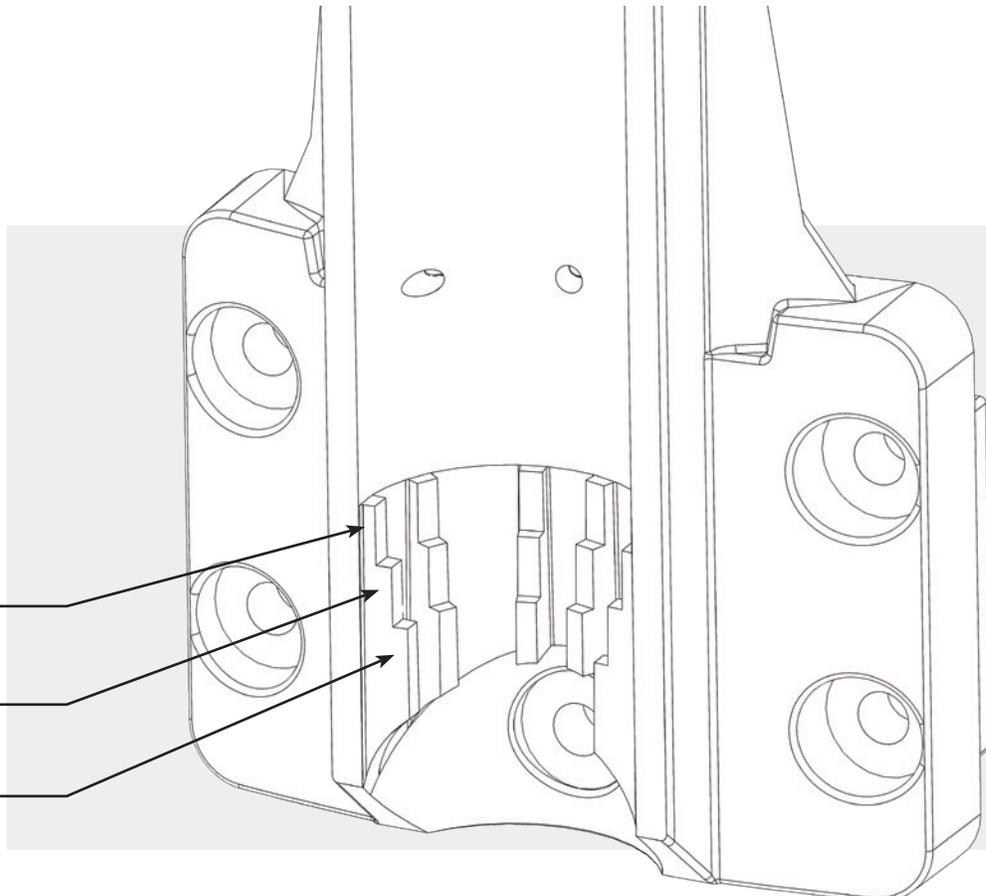



BOTANICARE®

TECHNICAL SUPPORT: 1-888-808-4826