




## XE MOBILE ATOMIZER

### USER'S MANUAL AND OPERATING INSTRUCTIONS

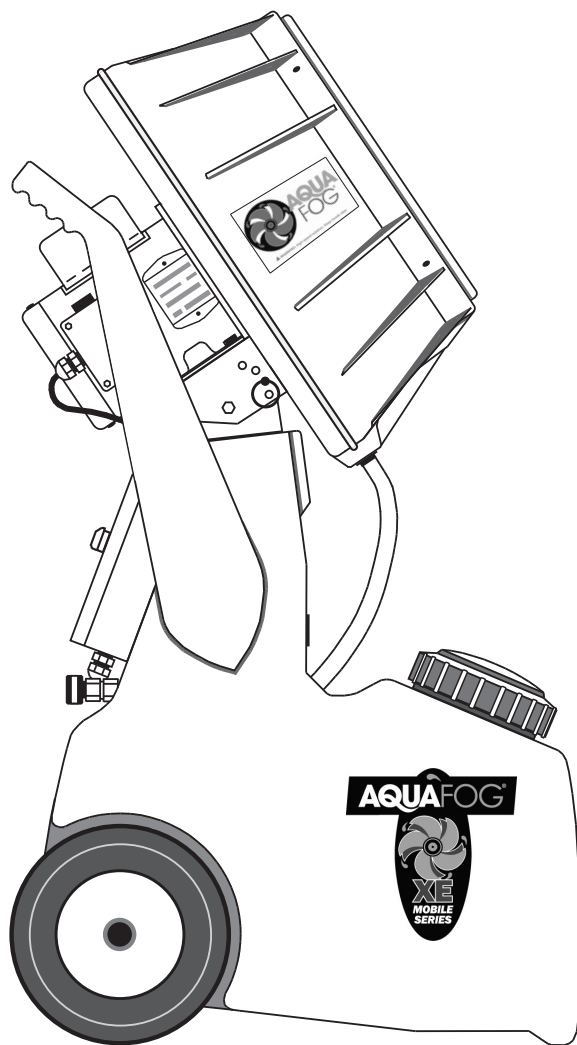

*Rear-Feed*

#### XE CRSM MODEL

- ☐ 115V 60Hz 1Ph
- ☐ 230V 50Hz 1Ph

## OPERATOR'S MANUAL



#### NOTICE

Read & Understand  
Retain for Future Reference

## TABLE OF CONTENTS

	PAGE
General Safety .....	3
Getting Started .....	4
Controls/ Installation .....	5
Flow Rates/ Calibration .....	6
Chemical Dilution .....	7
Placement and Setup .....	8
Treatment Procedure .....	9
Clean-up/ Maintenance .....	10
Troubleshooting .....	11 - 12
Aquafoq Fan Exploded View .....	13 - 14
CRSM Tank Exploded View .....	15 - 16
Electrical Schematics .....	17
Warranty .....	18

## DESCRIPTION

Aquafoq CRSM mobile units are intended to condition large volumes of air by atomizing chemical and water mixtures in air temperatures between 31° and 145°F. Any other use of these units will void the warranty and the manufacturer will not be responsible for problems or damages resulting from misuse.

## Notes

## SAFETY GUIDELINES

This manual contains very important information. This information will help ensure SAFETY and PREVENT EQUIPMENT PROBLEMS. Use these symbols to understand safety guidelines.



### DANGER

**DANGER INDICATES AN IMMINENTLY HAZARDOUS SITUATION WHICH, IF NOT AVOIDED, WILL RESULT IN DEATH OR SERIOUS INJURY.**



### WARNING

**WARNING INDICATES A POTENTIALLY HAZARDOUS SITUATION WHICH, IF NOT AVOIDED, COULD RESULT IN DEATH OR SERIOUS INJURY.**



### CAUTION

**CAUTION INDICATES A POTENTIALLY HAZARDOUS SITUATION WHICH, IF NOT AVOIDED, MAY RESULT IN MINOR OR MODERATE INJURY.**



### NOTICE

**NOTICE INDICATES IMPORTANT INFORMATION, THAT IF NOT FOLLOWED, MAY CAUSE DAMAGE TO EQUIPMENT.**

## GENERAL SAFETY


Since the mobile CRSM uses high-speed components to atomize liquids, the following safety precautions must be observed at all times:

1. Read all manuals included with this product. Be familiar with the product and controls.
2. The CRSM is intended to be used on level ground. Test for stability before operation.
3. Always operate CRSM with its safety guards and housing securely attached.
4. Follow United States Environmental Protection Agency (EPA) guidelines and regulations when fogging pesticide or chemical solutions.
5. Follow all local electrical and safety codes as well as the United States National Electrical Codes (NEC) and Occupational Safety and Health Act (OSHA).
6. Only persons well acquainted with these rules of safe operation should be allowed to use the atomizer.
7. Keep visitors away and NEVER allow children in the work area.
8. Use of an extension cord for the CRSM is not recommended. If necessary, refer to the A.W.G. chart in the following section or consult a certified electrician.
9. Before each use, inspect blade assembly and electrical components for signs of damage, deterioration, weakness or leakage. Repair or replace defective items before using.
10. Check all fasteners at frequent intervals for proper tightness.



### **⚠ WARNING**

**MOTORS, ELECTRICAL EQUIPMENT, AND CONTROLS CAN CAUSE ELECTRICAL ARCS THAT WILL IGNITE FLAMMABLE LIQUID OR GAS. NEVER OPERATE OR REPAIR IN OR NEAR FLAMMABLE LIQUID OR GAS. NEVER STORE FLAMMABLE LIQUIDS OR GASES IN THE VICINITY OF THE ATOMIZER.**

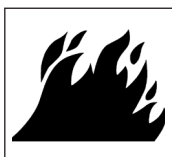


### **⚠ DANGER**

#### **HIGH-SPEED ROTATION**

### **⚠ DANGER**

**KEEP SAFETY GUARDS ATTACHED AND IN GOOD WORKING CONDITION**

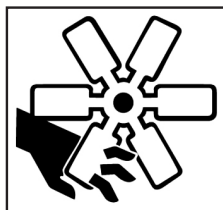

A motionless atomizer may appear safe, but its blade could suddenly begin high-speed rotation without warning as a result of control programming.

When the CRSM is automated by controls, warning signs should be posted near the high-speed equipment.

Disconnect and lock out power source to inspect or service the unit.

### **⚠ WARNING**

**NEVER OPERATE UNIT WITHOUT THE HOUSING INSTALLED.**


11. Keep fingers away from a running unit; fast moving and hot parts will cause injury and/or burns.
12. If the equipment starts to vibrate abnormally, STOP the motor and check immediately for the cause. Vibration is generally an indication of trouble.

## Fogging Precautions

### **⚠ DANGER**

**POTENTIALLY HAZARDOUS CHEMICAL VAPORS**

1. Avoid exposure to hazardous chemicals. Wear a respirator and protective clothing: goggles, gloves, long sleeves and pants, etc.
2. Read and understand all directions and safety precautions before operating CRSM. Follow all E.P.A. guidelines for chemical/pesticide use.
3. **NO** humans or animals should be in the area during chemical/pesticide application. **SERIOUS INJURY OR DEATH COULD OCCUR!**
4. Follow chemical manufacturer's instructions regarding length of restricted entry interval (**REI**).

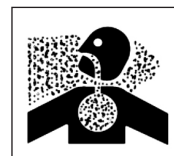

# GETTING STARTED

## UNPACKING CHECKLIST

### **WARNING**

**DO NOT OPERATE UNIT IF DAMAGED DURING SHIPPING, HANDLING OR USE. DAMAGE MAY RESULT IN BREAKAGE AND CAUSE INJURY OR PROPERTY DAMAGE.**

- ▶ Un-crate carefully and position CRSM on level ground.
- ▶ Save crate and packing materials until evaluation and testing are complete.
- ▶ Read manual carefully and understand all instructions.
- ▶ Do not connect power until after thorough inspection and filling the sump with liquid.
- ▶ After filling the unit with some liquid, inspect for leaks.
- ▶ Never operate without liquid in tank.
- ▶ Be sure guards are securely in place and warnings are clearly visible.
- ▶ Check power supply for correct voltage.

## ELECTRICAL

### **WARNING**

**GROUND FAULT RECEPTACLES ARE RECOMMENDED AND MAY BE REQUIRED BY LOCAL AND/OR NATIONAL CODE.**

### **NOTICE**

**USE OF AN EXTENSION CORD IS NOT RECOMMENDED. IF NECESSARY, REFER TO FIG. 12.**

**Fig. 12**

EXTENSION CORD SPECIFICATIONS*		
FOR SINGLE FAN USE ONLY • (AWG - American Wire Gauge)		
Voltage	25 to 50 ft.	50 to 100 ft.
115/230	16 AWG	14 AWG



\*Grounded and suitable for outdoor use.


## UNIT PREPARATION

### **WARNING**

**ENSURE THE BLADE ASSEMBLY IS FREE & CLEAR FOR START-UP (HIGH-SPEED ROTATION).**

Locate a level, stable area to place the CRSM. If there's a slight grade, blocking the wheels may be necessary to keep unit secure.


Visually check to make sure the fan blades can rotate freely. There should be approximately 1/4" space between the venturi pins and the blades.

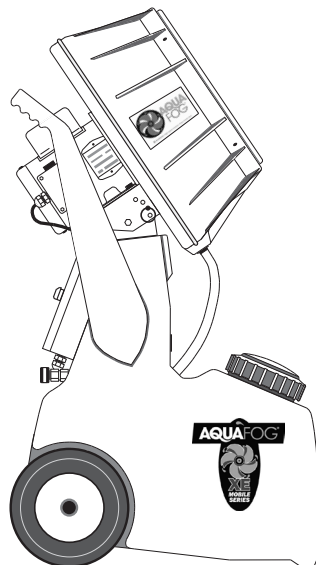

The CRSM is equipped with a four position pivoting fogging head with 15° intervals up to 45° (see Fig. 1). Propelling the fog upward allows more time for the particles to evaporate, keeping floor areas drier.

When making an adjustment, support the weight of the fogging head off of the pin for easy removal.


**Fig. 1**

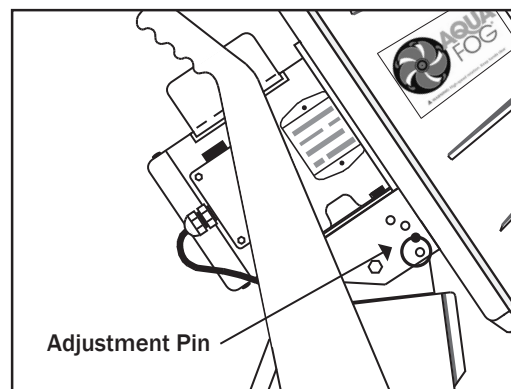

# EVALUATION/ CONTROLS/ INSTALLATION

## DANGER

**BEFORE TESTING FAN MAKE SURE ALL OBJECTS ARE OUT OF THE ROTATION PATH OF THE FAN BLADES. HIGH-SPEED WARNING. KEEP HANDS CLEAR! MAKE SURE GUARDS ARE INSTALLED OR UNIT IS OUT OF REACH.**

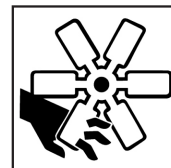

- ▶ For first-time evaluation, fill tank (with water only) about quarter full.
- ▶ Connect to power supply.
- ▶ BUMP START CRSM and check for proper fan blade rotation (clockwise if looking at front of unit). If incorrect, find rotation connection changes on the motor's electrical schematic.
- ▶ Turn on the unit and listen for any possible abnormalities, such as the blades rubbing against the venturi or any objects. Make re-adjustments if necessary.
- ▶ Evaluate fog quality adjusting the output by using the flow control valve. (See Fig. 2). After starting, it generally takes several seconds for the liquid to reach the atomizing fan.

## Back Controls

The Control box offers two operational control modes:


**[ON]** - for manual or automated operation (when combined with additional control)

**[SHUT-OFF mode]** - will automatically turn off the unit when the tank becomes nearly empty. Expect about 1/2 to 1 gallon of unused liquid to remain.

The fogging output can be regulated by adjusting the Primary Flow Valve. For fine control at low flow rates use the secondary High/Low flow control valve. (See Fig. 2)

**Particle size is smaller/drier at lower outputs, so it is wise to operate the unit at a lower output for longer periods of time rather than high outputs for short periods of time.**

Hose Connector is controlled by an internal float valve.

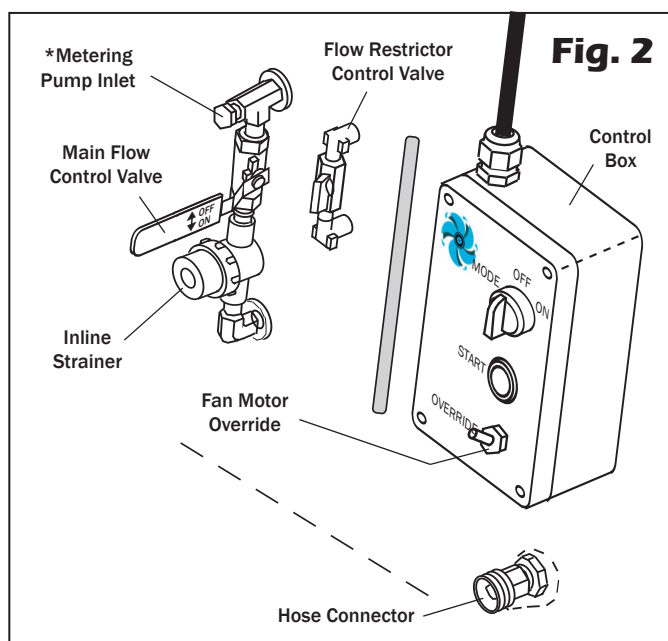

**Fig. 2**

\*Connection for metering pump (3/8" fitting provided).

## SETUP




▶ The timer is generally used to turn off the CRSM. If a Metering Pump is used it should also be controlled by the timer.

### A) Manual Operation

Simply mix the chemical solution and pour it into the tank. Wettable powder solutions tend to separate quickly, keep well stirred.

### B) Feed Pump Operation

If using liquid chemicals. A feed pump can be used to dose concentrate into the CRSM during operation.

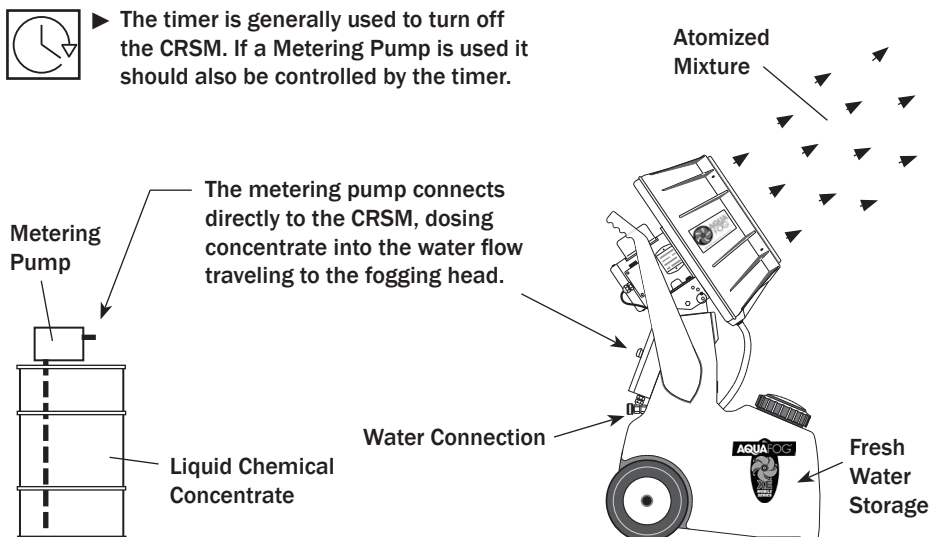


# CRSM FLOW RATES

## LOW FLOW, Range

### Output Range @ fully closed

@ 60Hz	0 - 2.5	GPH
@ 50Hz	0 - 8.9	LPH

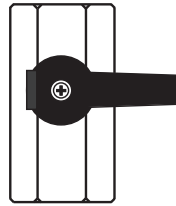

Low Flow, fully closed

### Low Flow Setting (flow restrictor valve)

To gain more accurate control of low flow outputs. Turn flow restrictor valve knob to the 3 o'clock position or anywhere in between, then use the main flow control valve to control that specific range.

Net fogging output = range amount - drainage

## HIGH FLOW, Range

### Output Range @ fully open

@ 60Hz	0 - 8.5	GPH
@ 50Hz	0 - 28.4	LPH



High Flow, fully open

### High Flow Setting (flow restrictor valve)

To gain greater flow outputs. Turn flow restrictor valve knob to the 6 o'clock position or anywhere in between, then use the main flow control valve to control that specific range.

Net fogging output = range amount - drainage

## CALIBRATE THE FLOW RATE

### NOTICE

*AUTOMATIC PRIMING OF THE SYSTEM OCCURS THROUGH THE CIRCULATION TUBE.*

### Calibrated Flow Rate

Means having a (set) specific flow rate when the large (main) flow control valve is fully open. This allows for an easy repeat of fogging operations.

Also, the flow rate can be calibrated to match with a chemical's dilution ratio. An important feature when using a metering pump.

### To Calibrate a Flow Rate (Two Techniques)



Fill the tank with some water.

- T1)** Carefully remove the housing's drain tubing from the tank. Tilting the fogging head temporarily, will ease removal.  
[or]
- T2)** Remove the Fan Housing and Blade Assembly to expose the Feed Tube (See Fig. 3). This will allow a visual of the water stream, helpful when making adjustments

Fully open the Main Control Valve (See Fig. 3a) located on the back of the unit. Switch off the fan motor using the override toggle switch. Turn on the unit (only the pump should be running). Using a measuring cup to catch water in 60 second intervals from the Feed Tube or Drain Tubing. Multiply ounces of water by 60 and then divide by 128. This will give you your GPH rate.

Math example: 1 minute captures (4.2 ozs. x 60 ÷ 128 = 2 GPH)

Use the (small) Flow Restrictor Valve (See Fig. 3a) to make adjustments and repeat process as needed. Once having a calibrated (specific) flow rate, the small valve cannot be moved, but the large (main) valve can be, understanding that at full open, the flow rate will be at the specific calibrated flow rate.

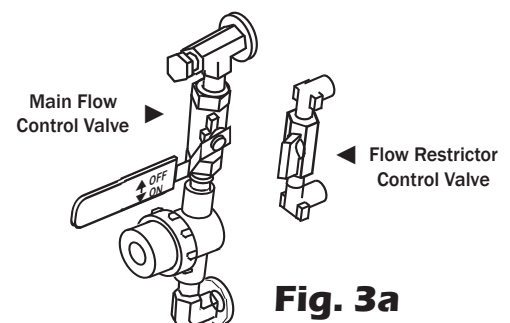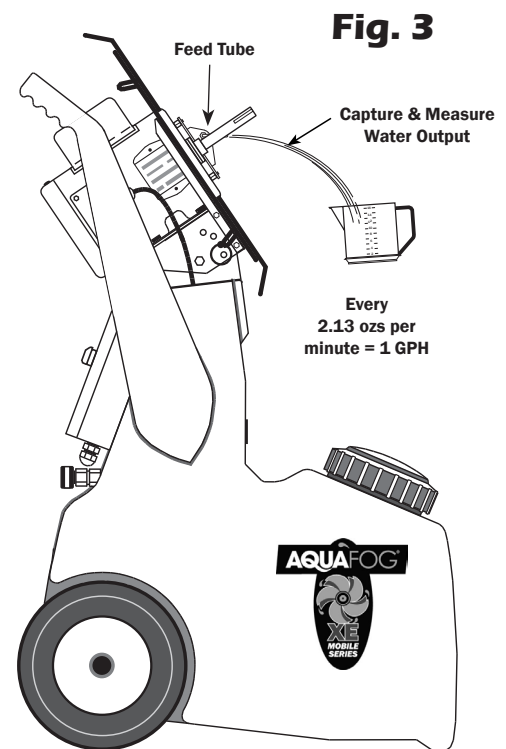



# CHEMICAL DILUTION (FOR FUMIGATION)

## "ULV" - SUMMARY

**ULV** (Ultra Low Volume) refers to the amount of water needed to mix and disperse chemical solution evenly. Typical sprayers use small water droplets to carry the chemical solution to its intended source. That spraying process requires much more water than a ULV method to treat an equal amount of area.

**CRSM's** atomization process produces billions of tiny fog particles laced with chemical. These fog particles are propelled with great force and quickly evaporate out most of their water content, leaving behind small particles of pure chemical residue. These airborne micro-sized particles of residue will float in all directions until eventually making contact and coating most surfaces evenly.

**Conventional spraying requires:** about 3.5 gallons of water / every 1,000 square feet of greenhouse.


**Low-Volume application requires:** about 0.25 gallons of water / every 1,000 square feet.

## CRSM DILUTION



**CAUTION**

**WEAR GOGGLES & RUBBER GLOVES WHEN HANDLING CHEMICALS.**

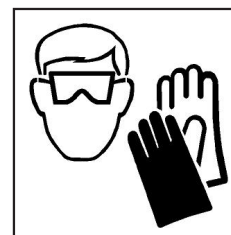

1. Determine the square footage of the area to be treated.
2. Refer to the chemical's label to determine its dilution formula:
  - (A) Pounds of chemical needed per acre
  - (B) Ounces of chemical per 100 gallons of water applied by conventional spray nozzles

**If (A)** Convert the pounds into ounces. Divide the ounces by 4.36 [43,560 sq. ft. per acre]. This will determine the amount of chemical needed to cover 10,000 square feet.

**Example:** A chemical labeled at 2 pounds per acre.

$2 \text{ lbs.} \times 16 \text{ ozs.} = 32 \text{ ozs.} \div 4.36 = 7.33 \text{ ozs. per 10,000 square feet of greenhouse OR}$

$2 \text{ lbs.} \times 16 \text{ ozs.} = 32 \text{ ozs.} \div 43.6 = .73 \text{ ozs. per 1,000 square feet of greenhouse}$

**If (B)** Multiply the number of ounces by .035. This equals amount needed to treat 1,000 square feet.

**For example, if treating 8,000 square feet:**

$12 \text{ ozs per /100 gals} \times .035 = .42 \text{ ozs} \times 8 = 3.36 \text{ ozs. (amount of chemical needed in just a few gallons of water)}$

*- This is based on average use of 3.5 gallons for every 1,000 square feet using conventional spray nozzles.*



### Bottom Line and Rule of Thumb

Regardless of the application method, you will need the same amount of chemical.

#### The difference is:

Conventional spray nozzles require lots of water.

*(because the spray is being used to carry the chemical to the product)*

CRSMs need only a few gallons of water.

*(because 1 hour is generally enough time to fumigate the chemical mixture into the atmosphere)*


# PLACEMENT AND SETUP

## When to Apply Treatment


The BEST time for a pesticide application is at dusk, when the air is cooling off. Another good time is at early dawn before the sun warms up the area.

## What to Expect

During fogging operation, millions of small fog particles will quickly evaporate into microscopic sticky chemical residue. This invisible fumigation will circulate quickly and engulf the entire enclosed air space, lightly covering all surface areas. Although you will not be able to see this movement, the movement would closely resemble a similar release and circulation of ambient temperature smoke.

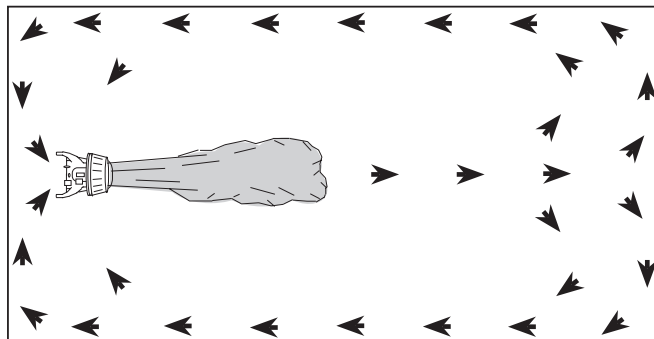

**Fig. 7**

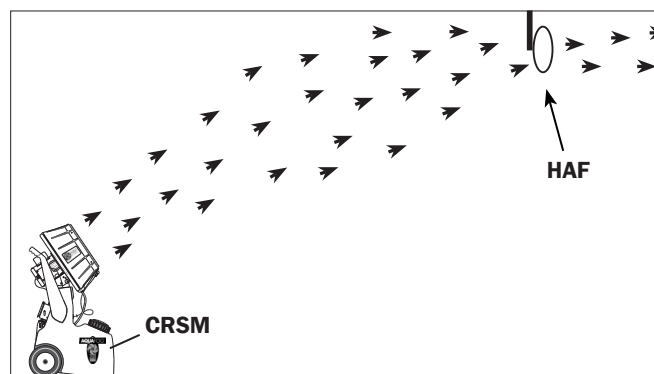

### ► Close Up the Structure


Fumigation can only work in a closed environment. All openings to the exterior need to be closed.

### ► Pivot Fogging Head Up

Pivot the fogging head upward into large open air space away from the foliage. If greenhouse is equipped with Horizontal Airflow Fans (HAF), simultaneous operation of CRSM and HAFs will enhance circulation and even out the treatment. Position HAFs where they'll be most effective. (See Fig. 7)

### ► Treatment Time

Use the Auto Shut-Off mode or calculate how long it will take the tank to empty and then add an additional 30 to 60 minutes to aid in circulation (if using the timer). Submersible pumps are engineered to operate submerged. Running them dry can damage or shorten the life of pump. (See Fig. 8)

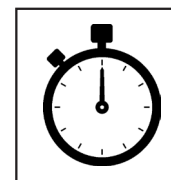

**Fogging at 5 GPH** = Fine/ Dry Output with Faster Treatment Time

**Fogging at 2 to 3 GPH** (recommended) = Very Fine/ Vapor Output, but Longer Treatment Time

### ► Automation

Use the units Auto Shut-Off mode or set up the time clock to automatically turn off the system if desired.

**Fig. 8**

FOGGING @ 5 GPH			FOGGING @ 3 GPH		
Amount of Solution	Est. Discharge Time	Treatment "On Time"	Amount of Solution	Est. Discharge Time	Treatment "On Time"
2 gallons	25 min	1 hr	2 gallons	50 min	1 - 1/2 hrs
4 gallons	50 min	1 - 1/2 hrs	4 gallons	100 min	2 hrs
6 gallons	75 min	2 hrs	6 gallons	150 min	2 - 1/2 hrs



# TREATMENT PROCEDURE



## DANGER

*FOLLOW E.P.A. SAFETY INSTRUCTIONS AND GUIDELINES FOR PESTICIDE AND CHEMICAL USE.*



## DANGER

*NO HUMANS OR ANIMALS SHOULD BE IN THE TREATMENT AREA DURING APPLICATION.*



## DANGER

*WEAR PROTECTIVE CLOTHING INCLUDING GLOVES, HOOD, ETC. WHEN HANDLING CHEMICALS.*



## NOTICE

*USE ONLY ON PLANTS MARKED SAFE FOR PESTICIDE USE.*



## PREPARATION

1. Read all instructions.
2. Post warnings on entrances to the treatment area.
3. Close structure's vents and doorways.
4. Complete placement and setup (refer to **Page 8**).
5. Turn on available HAFs.
6. Ensure CRSM has been **tested** (operated with water only) set to Auto Shut-Off mode.
7. If using timer, connect time clock and set it to turn the unit off (optional, refer to **Page 8**).



## PROCEDURE

1. Operate **ONLY** the CRSM's pump (fan motor override, switch off).
2. Confirm agitation of the water inside the tank.
3. Confirm operation of flow output (water trickling out of stationary blade assembly).
4. In a small bucket, thoroughly pre-mix the chemical with some water.
5. **When Ready!** Slowly pour the pre-mixed chemical into the tank's agitated water.
6. Replace the tank's lid.
7. **TURN ON FAN MOTOR** (unit's override switch) and **immediately leave area** (unless wearing protective gear with a respirator).



## RE-ENTRY

1. The CRSM has been turned OFF.
2. Once OFF, the chemical's re-entry time period (REI) begins. The REI can be found on the chemical's label and is generally 6 or more hours.
3. After the REI, enter the area and open up vents and doorways and turn on ventilation.
4. Check the CRSM for a mostly empty tank. Save remaining solution, if desired.
5. Clean the unit for future use (refer to next page).



### Checking for Results and Evaluating Coverage

If using liquid chemicals, checking for results is the only viable evaluation. If using wettable powders, evaluate coverage by scattering clear cellophane sheets throughout the area in advance of a treatment. Upon re-entry, examine the cellophane under light for differences in deposit intensity.

# AFTER TREATMENT CLEAN-UP



## **WARNING**

**DISCONNECT AND LOCK OUT POWER SOURCE  
BEFORE SERVICING**

## **NOTICE**

**IMPORTANT!  
CLEAN UNIT**

**SHORTLY AFTER EACH TREATMENT.**



### **1. Clean CRSM**

**DO NOT** allow remaining chemical deposits to dry inside the unit (especially wettable powders). This will cause major clogging issues.

### **2. Take Outside**

Using a garden hose, unscrew the cap and clean the in-line strainer (Part #71) located on the back of the unit underneath the Flow Control Valve.


### **3. Flush Tank**

Remove tank's drain plug (See Fig. 9) to flush all sediment from tank and around pumps.

### **4. Operate with Water**

After rinsing, re-install strainers and run the unit with fresh water and throttle the flow control valves open and closed a few times. When finished, drain remaining water and secure drain plug. (See Fig. 9)

**Fig. 9**

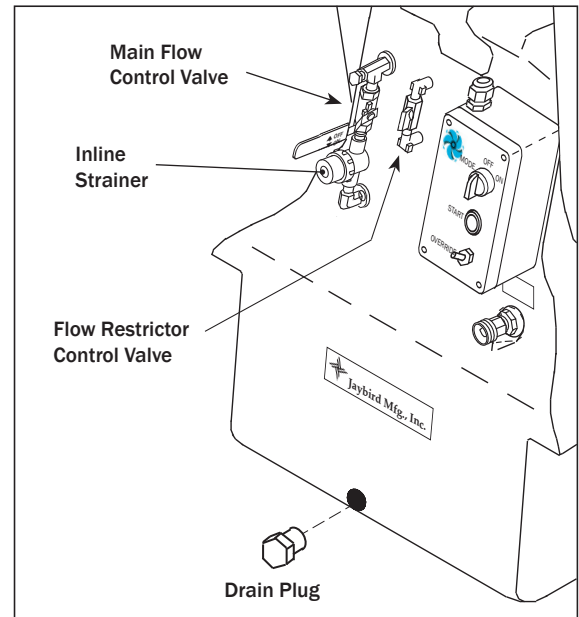

## GENERAL MAINTENANCE

### ► **Inspect Blade Assembly**

Clean the blade assembly about once a year, especially if a film of calcium or mineral deposits is visible on the exterior of the blades. Remove any build-up from the blades and any debris from blade passageways. While cleaning, inspect for irregularities or hairline cracks and replace as necessary.

### ► **Winter Storage**

Protect your mobile Aquafog from winter damage. Expansion due to freezing can burst the fittings or the internal feed pump. If storing unit in below freezing temperatures, be sure all fluid is drained from the tank area. Damage due to freezing is not covered under warranty.

### ► **Lubricate Main Motor**

The main motor is a permanently lubricated motor, but it is beneficial to apply spray oil around the shaft where it exits the motor body. Lubricate motor once a season or whenever squealing occurs.

# TROUBLESHOOTING



## **WARNING**

***BEFORE INSPECTION AND/OR SERVICE,  
DISCONNECT AND LOCK OUT POWER SOURCE.***

---

### **1. Poor/Inconsistent Fogging Output**

- A.) Inconsistent or spotty chemical coverage usually occurs because the fog volume output is too high. Ideally, fog will disappear when fogging at rates near 3 GPH. To check for fog volume output, refer to Maximum Pre-set Flow Rate (See **Page 6**).
- B.) Inconsistent fogging coverage may be circulation-related. To maximize circulation, check inside tank around pumps, making sure they are both free from build-up.
- C.) Reservoir may be clogged. Fluid entering a clogged reservoir will spill out the back of the blade instead of entering the passageways of the fan blades (also ref. **6b**). To clean, remove the blade assembly from the motor shaft and disassemble. Next, flush the reservoir under a sink. Check and clear the passageways for each individual blade as well. Reassemble and reattach.
- D.) It is possible for an air pocket to become caught within the plumbing. If you think this is occurring, throttle both flow control valves to wide open a few times to expel any trapped air. If the problem persists, try using greater amounts of fluid held within the tank. The CRSM will automatically prime the feed pump, but at low flow outputs this can take up to 20 seconds.
- E.) Consistency of fogging output greatly depends on the consistency of the cleaning procedures (See **Page 10**). Check strainer, plumbing, and inside of tank for dried sediment or clogs.

### **2. Blades Rub Against Venturi**

- A.) To make a horizontal adjustment, loosen the 4 bolts (Part #56) at the base of the main fan motor and shift motor side to side until centered. Retighten bolts.
- B.) To make a vertical adjustment, detach the housing by removing the 6 small bolts (Part #54). Next, loosen 4 bolts (Part #52) and make necessary adjustments. Retighten bolts and reattach housing.

### **3. Fan and/or Pumps Do Not Operate**

Check voltage requirements on unit and electrical supply. Have a certified electrician check for live receptacle, plug, power line, and fan's override toggle switch. If the fan works the pump does not, look for any loose connections inside the control box. If there are no loose connections, the pump is maybe damaged and should be replaced.

### **4. Fan and/or Motor Vibration**

If the fan unit begins vibrating severely, first be sure the blade assembly is fully engaged and securely tightened on the motor shaft. Next, inspect the blade assembly, particularly the ends of the blades. Look for wear or cracks - replace as necessary. Look for deposits of calcium or minerals - clean and remove mineral deposits and/or calcium. Also, check that the motor mounting hardware is securely tightened.

# TROUBLESHOOTING (CONT.)



## WARNING

**BEFORE INSPECTION AND /OR SERVICE,  
DISCONNECT AND LOCK OUT POWER SOURCE.**



### 5. No Fog

- A.) The self-priming system will usually take about 10 seconds before you see fog output. Check to see if the main flow valve is open. The valve is open when the handle is down.
- B.) If after 20 seconds and still no flow output. Check restrictor flow rate valve. If good flow output at full open but none at fully closed, This would indicate clogged flow restrictor tubing. This special tubing is located behind the 1-1/4" NPT service access plug.
- C.) Check for sediment clogs. Flush the inline strainer and check for sediment build-up around the inlet of the pump. Clean inlet screen.
- D.) The pump may not be operating. Check by removing the Inline strainer cap and turning system On. If no fluid flows from the strainer, the pump may need to be replaced.

### 6. Poor Quality Fog

- A.) The liquid feed tube (Part #575) may not be properly positioned. The feed tube is located behind the blade assembly and should be inserted approximately 1/4" into the slot between the motor shaft and the stainless steel face plate. Centered in the slot area and aimed slightly downward, free from any rotational contact.
- B.) Liquid not traveling through the fan blades. This can be diagnosed by viewing the back of a blade assembly during operation (using a bright flashlight). If system is clogged, liquid can be seen spinning out of the slot area between the motor shaft and stainless steel face plate (Part #573). If confirmed, replace fan blade assembly (Part #571-assy). Cleaning the internal passageways of a blade assembly is feasible with the aid of some speciality tools.

### 7. Unusual Noise

Squealing at start-up or during operation may be caused by the motor shaft's bearing seal. Spray with lubricant at the front of the motor where the shaft exits the motor's frame.

### 8. Fan Motor Becomes Excessively Hot

The main fan motor normally becomes very hot to the touch. However, it should not get so hot that it begins to smell or smoke, nor should the power cord become hot. Discontinue operation and consult an electrician to properly evaluate the problem.


### 9. Electrical Breaker Tripping


If the electrical breaker trips off, there is an overload in the system and there may be a serious motor problem. Turn off all other devices connected to the same circuit. If the breaker continues to trip, the motor is probably in need of repair. Consult an electrician for evaluation.

# AQUAFOG FAN EXPLODED VIEW

## PART IDENTIFICATION


ID #	Description	Qty/Unit
1	Housing	1
2	Safety guard	1
7	Liquid feed tube fitting	1
8	Drain fitting	1
10-2000	WDD motor 115/240V // 60/50Hz	1
14	Pinned venturi assembly	1
16	Rear guard	1
20	1/4" Heavy large diameter washer	8
32	1/4-20 nylon stop nut SST	8
35	SST washer for feed tube fitting	3
41	10-24 x 5/8" phillips RH SST	4
42	10-24 nylon stop nut SST	4
43	11/16 x 1 1/4" flat washer SST	1
45	Liquid-tight cord fitting	1
49	10-24 x 1/2" TH phillips SST	4
52	1/4-20 x 3/4" HH bolt SST	4
54	1/4-20 x 3/8" button head cap screw	6
56	5/16-18 x 3/4" HH bolt SST	10
57	5/16" lock washer SST	8
58	5/16" flat washer SST	8
114	Drain fitting nut	1
115	Drain gasket	1
116	5/16-18 finish nut SST	4
117	1/4-20 x 5/8" HH bolt SST	4
288	1/8" NPT Elbow	1
293	1/4 tube x 1/8" MNPT	1
308	XE blade tip setscrew SST	3
349	5/16" brass rod	1
391	Top pivot plate	1
392	Bottom pivot plate	1
394	Brass pivot washer	2
395	5/16" nylon lock nut	2
400-047	XE Faceplate screw SST	8
403	Brass ring	1
417	Machine Nut	4
427	Safety Guard Clip	4
434	1/8" NPT x 1/4" tube elbow	1
510	10-24 setscrew SST	2
522	10-32 x 1/4" button head cap screw	2
523	#10 lock washer SST	2
562	Drain tubing	1.5'
568	XE Feed tube support SST	1
571	Turbo XE blade assembly	1
573	XE rear-feed faceplate SST	1
574	O-ring	1
575	Liquid feed tube	1
576	Brass stand-off	2
600-L	RSM support left	1
600-R	RSM support right	1
844	Venturi O-ring	2

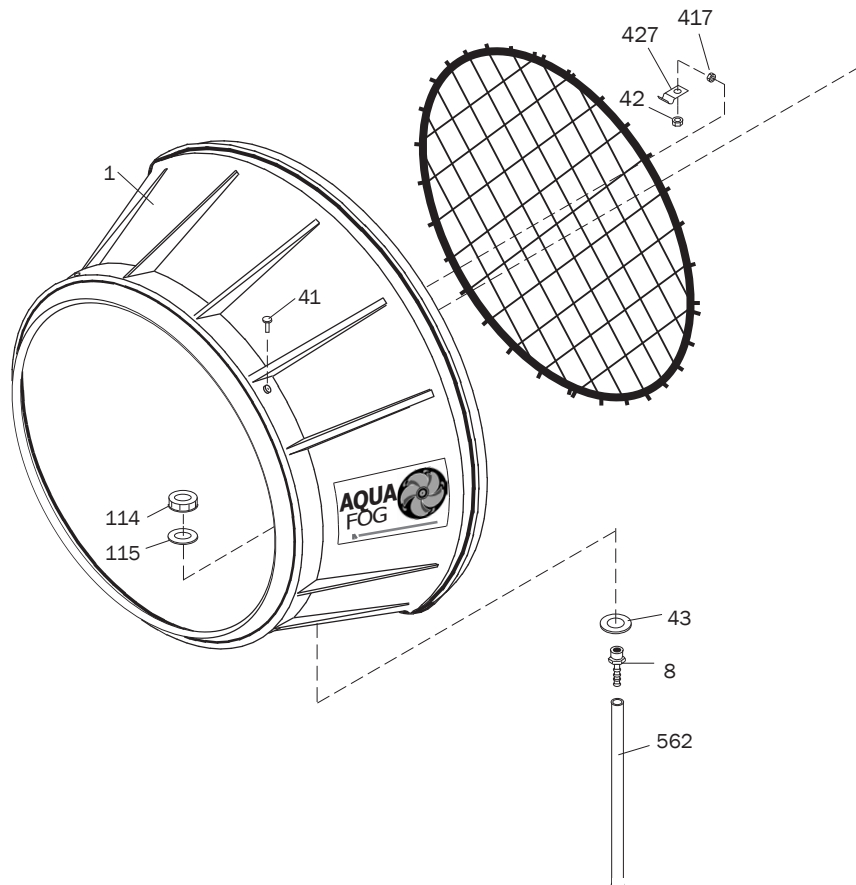

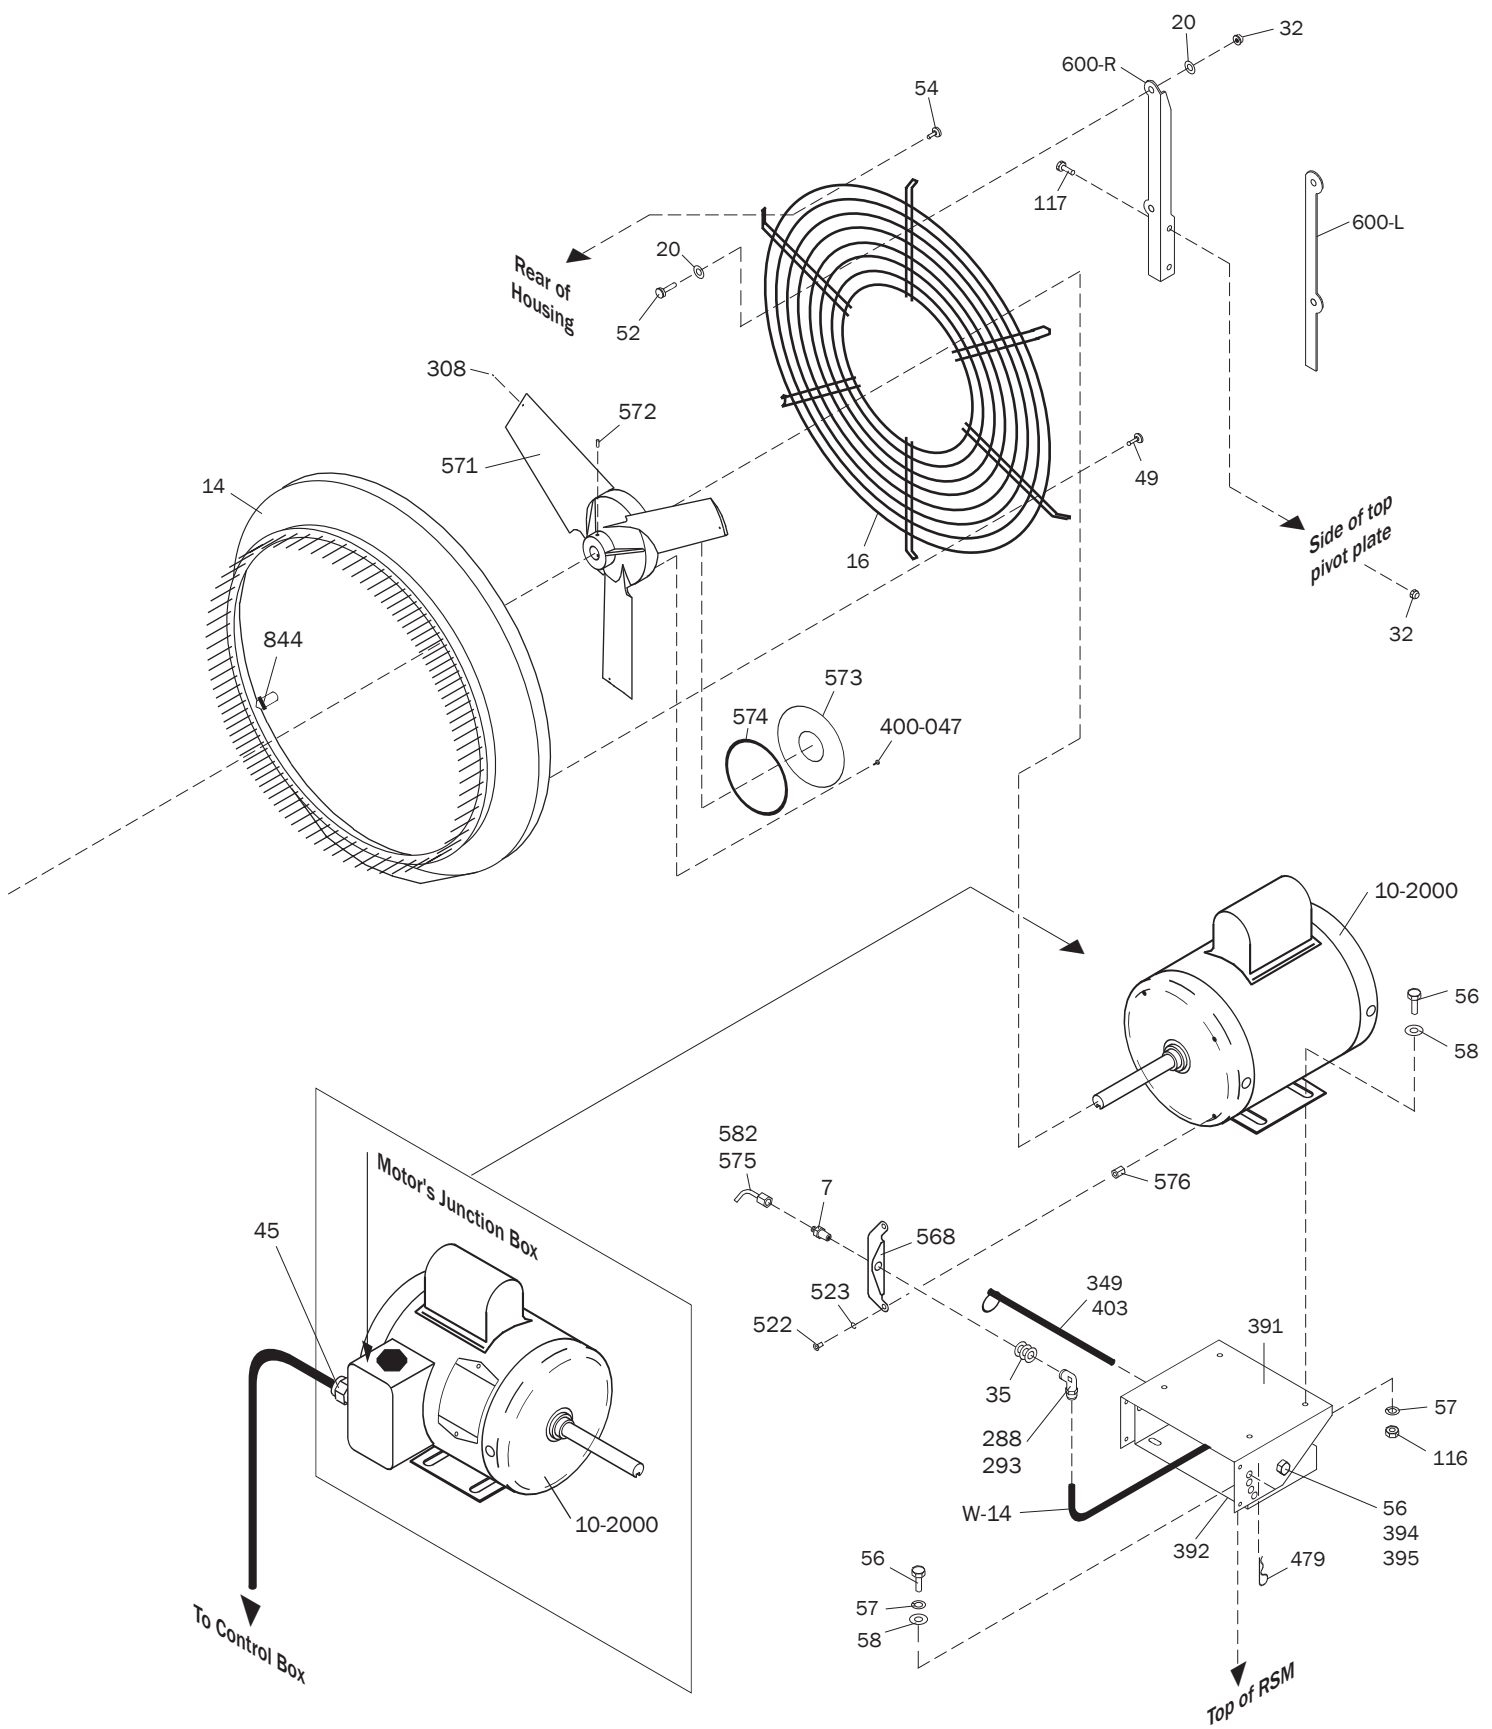




# CRSM TANK EXPLODED VIEW

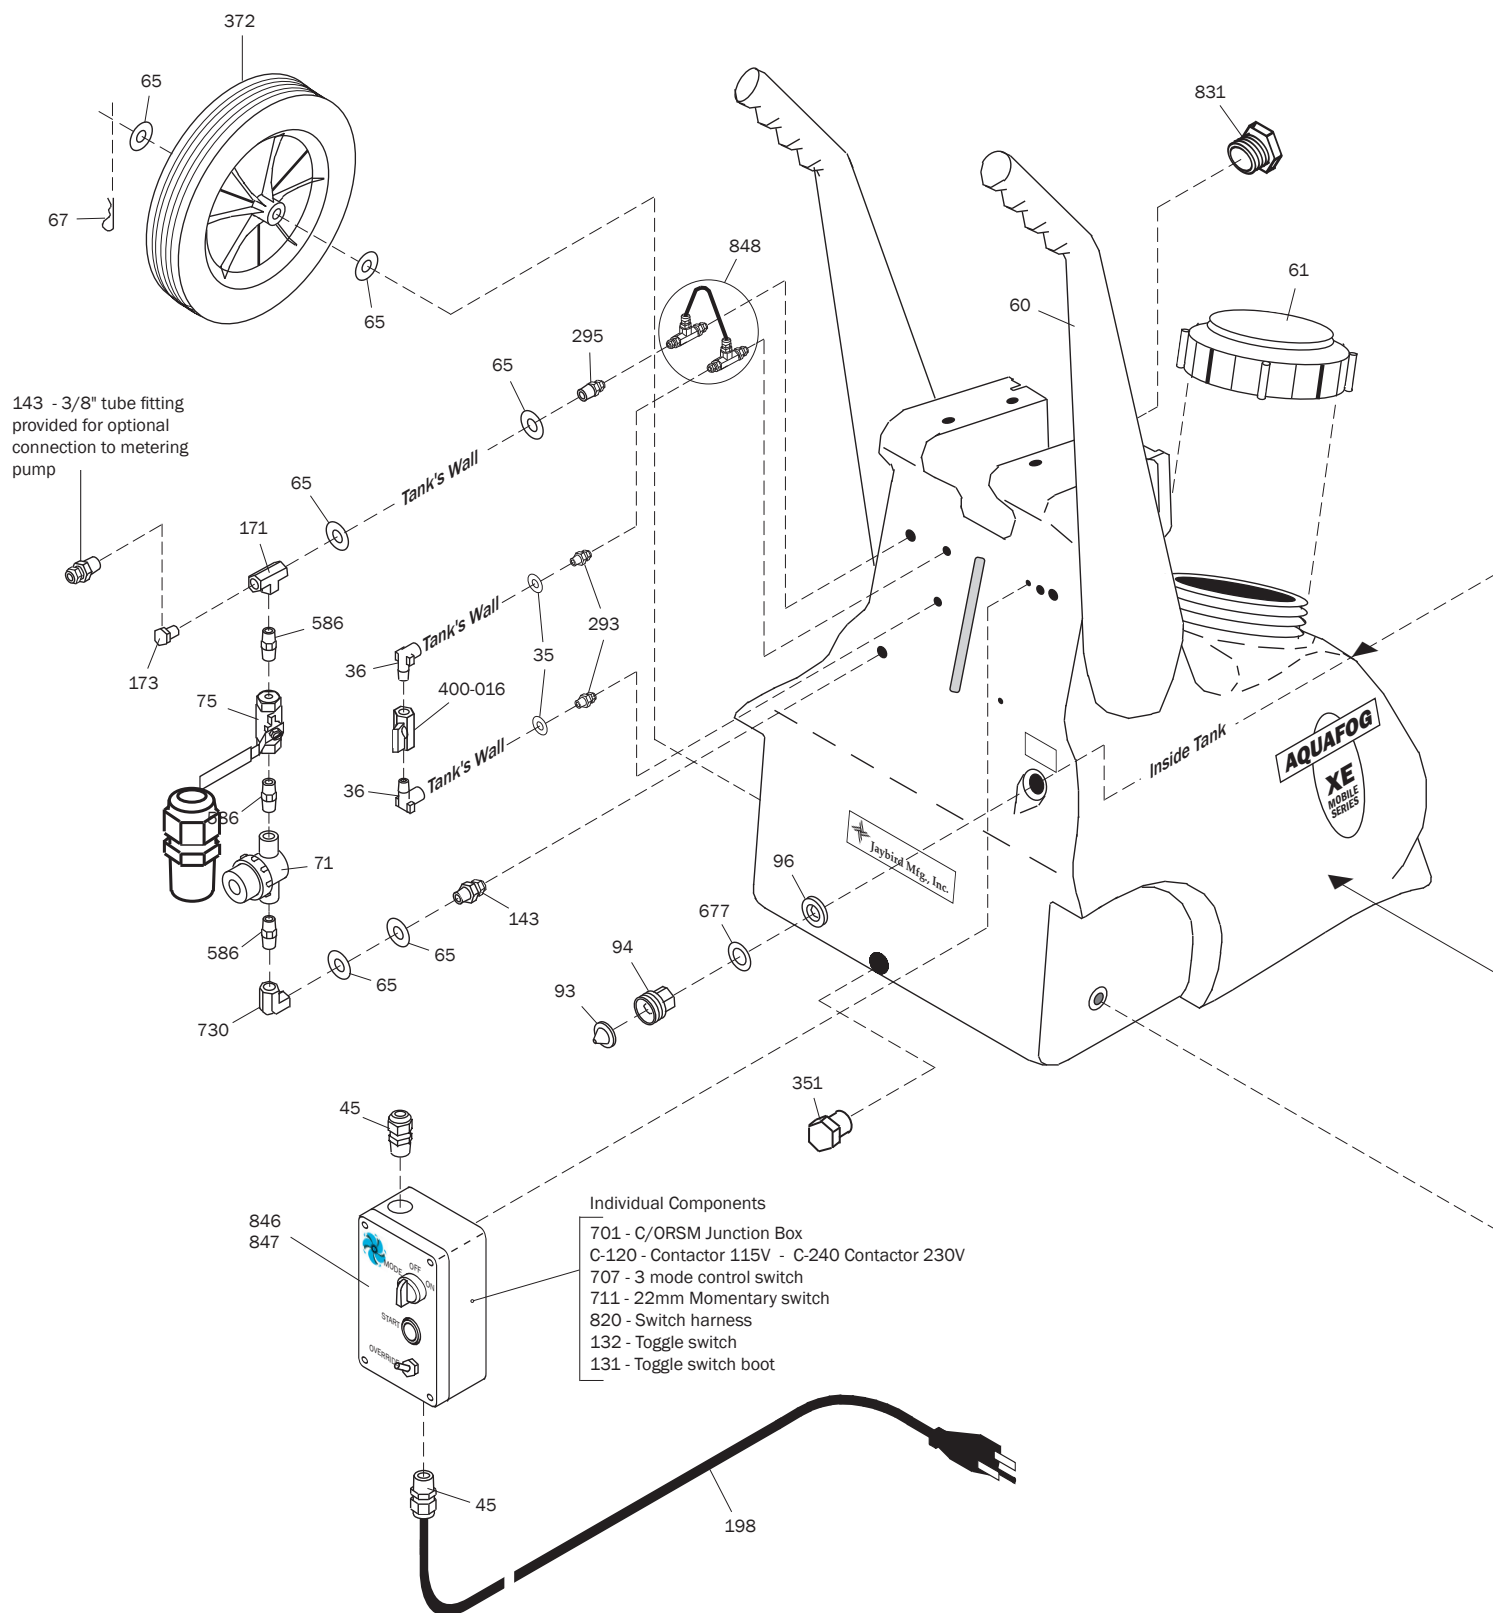

# PART IDENTIFICATION LIST

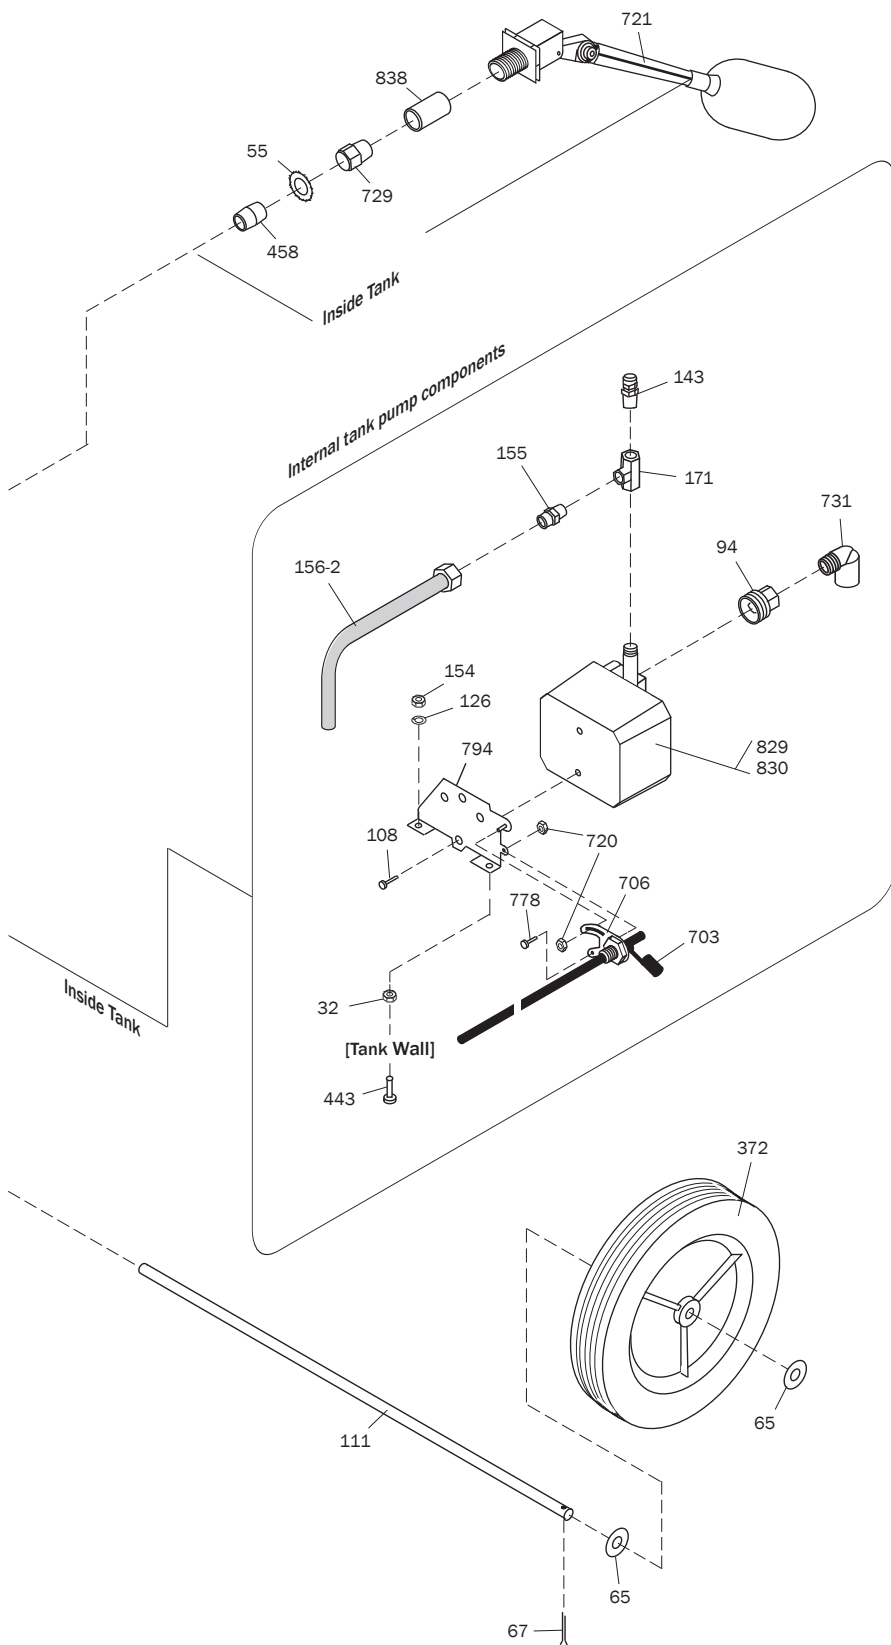


## PART IDENTIFICATION


ID #	Description	Qty/Unit
32	1/4-20 nylon stop nut SST	2
35	1/8" NPT washer	2
36	1/8" NPT Street elbow	2
45	Liquid-tight cord fitting	2
55	M20 Serrated lock washer SST	1
60	RSM tank	1
61	Fill cap	1
65	1/2" flat washer SST	8
67	5/32 x 1 1/4" hair pin	2
71	Inline strainer 1/4" female NPT	1
75	Flow control valve	1
76	10-24 x 3/4" phillips RH SST	2
93	Hose connector gasket	1
94	Hose connector	2
96	Gasket	1
108	#8 x 3/8" self tapping screw	2
111	Axle SST	1
126	1/4" lockwasher SST	2
143	1/4" NPT-M x 3/8 tube fitting	3
154	1/4-20 finish nut	2
155	1/4" NPT-M x 1/2" compression fitting	1
156-2	Circulation tube	1
171	1/4" NPT TEE	2
173	1/4" NPT-M plug	1
198	18' Power cord with plug	1
293	1/4" Tube x 1/8" NPT fitting	2
295	1/4" Tube x 1/4" tube fitting	2
351	1" NPT black nylon hex plug	1
372	Heavy-duty RSM wheel	2
443	1/4-20 x 1-1/4 HH bolt	2
458	1/2" NPT Nipple	1
586	1/4" NPT Hex nipple	3
677	11/16 x 1-1/4" flat washer SST	1
703	RSM Fluid level switch	1
706	Fluid level bracket	1
720	8-32 Nylon lock nut	2
721	RSM Float valve	1
729	1/2" NPT Adapter	2
730	1/4" NPT elbow	1
731	1/2" NPT Street elbow PVC	1
778	8-32 Button head screw	2
794	C/ORSM Pump bracket	1
829	Feed/Recirt Pump 115 volt 60 hz.	1
830	Feed/Recirt Pump 230 volt 50 hz.	1
831	1-1/4" NPT Plug	1
838	1/2" NPT-F PVC Coupling	1
846	C/ORSM Control box assy. 115V	1
847	C/ORSM Control box assy. 230V	1
848	RSM Flow restrictor assy.	1
400-016	1/8" Quarter-turn valve	1

# ELECTRICAL SCHEMATICS

115 VAC 60 Hz 1 Ph

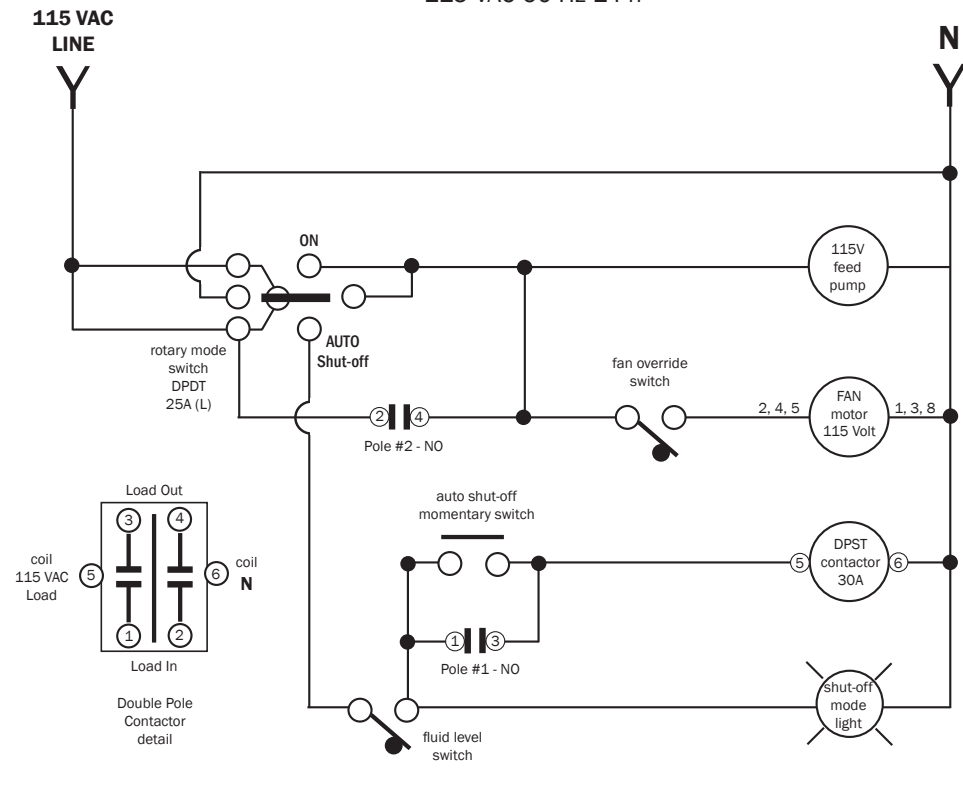

230 VAC 50 Hz 1 Ph

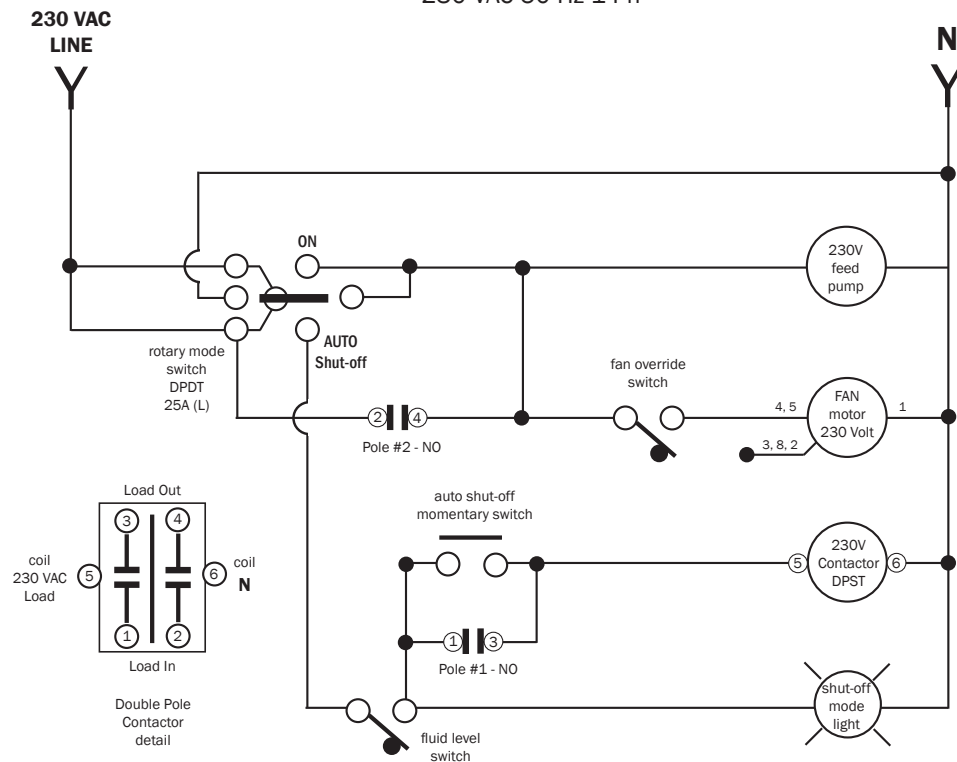



## ONE YEAR LIMITED WARRANTY

AquaFog and accessories are warranted to the original purchaser against defects in material and workmanship under normal use for one full year from date of purchase. Any part determined to be defective and returned to the manufacturer, shipping cost prepaid, will be repaired or replaced at Jaybird Manufacturing, Inc.'s discretion without charge. Proof of purchase date and an explanation of the problem or complaint must accompany the returned portion of the machine.

Jaybird Manufacturing, Inc. reserves the right to verify the legitimacy of claimed defects. The provisions of this warranty do not apply to damage resulting from direct or indirect misuse, negligence, accident, lack of maintenance, or unauthorized repairs or alterations which affect the machine's performance or reliability.

**LIMITATIONS OF LIABILITY. TO THE EXTENT ALLOWABLE UNDER APPLICABLE LAW, JAYBIRD MANUFACTURING, INC.'S LIABILITY FOR DEATH, INJURIES TO PERSONS OR PROPERTY, OR FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES ARISING FROM THE USE OF OUR EQUIPMENT IS EXPRESSLY DISCLAIMED. JAYBIRD MANUFACTURING, INC.'S LIABILITY IN ALL EVENTS IS LIMITED TO, AND SHALL NOT EXCEED, THE PURCHASE PRICE PAID. NO OTHER WARRANTY, EXPRESSED OR IMPLIED, IS AUTHORIZED, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.**

*This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.*



**Jaybird Manufacturing, Inc.**

135 Summer Lane

Centre Hall, PA 16828

Parts & Service: 1.814.364.1800

Website: [www.jaybird-mfg.com](http://www.jaybird-mfg.com)